



a xylem brand

Rule-Mate

500-1100

INSTRUCTION MANUAL

- FR** Manuel d'utilisation
de Rule-Mate 500-1100
 - DE** Bedienungsanleitung
für Rule-Mate 500-1100
 - IT** Manuale delle istruzioni per
Rule-Mate 500-1100
 - NL** Handleiding Rule-Mate
500-1100
 - SE** Användarhandledning för
Rule-Mate 500-1100
 - ES** Manual de instrucciones de
Rule-Mate 500-1100
-



CAUTION: Read this manual carefully before installing, using or servicing this product. Failure to follow the instructions within this manual could result in explosion, property damage, severe personal injury and/or death.

NOTICE: Save this manual for future reference, and keep it readily available at the location of the unit.

General safety rules

- Always keep work area clean
 - Pay attention to the risks presented by gas and vapors in the work area
 - Avoid all electrical dangers.
 - Pay attention to the risks of electric shock or arc flash hazards
 - Always bear in mind the risk of drowning, electrical accidents and burn injuries
-



DANGER: This product is not intended for damage control or to deal with flooding resulting from hull damage. This product is intended to be used in Bilge Pumping Systems for small craft with a hull length up to 79 feet (24 meters), as described within the introduction and scope of ISO 15083. Bilge Pumping Systems, as specified in ISO 15083, are limited to normal amounts of water in an intact boat due to spray, rain, seepage, spillage, and occasional small amounts of water shifting from boat movements in heavy weather. Use of product in any other way could result in flooding, catastrophic damage to craft, serious personal injury, or death.



WARNING: This pump is designed for use with fresh water and salt water ONLY. Use with any other hazardous, caustic, or corrosive material could result in damage to the pump and the surrounding environment, possible exposure to hazardous substances and injury.

Bilge pumps shall be mounted in accordance with the pump manufacturer instructions, and in an accessible location to permit servicing and cleaning of the intake and/or screening.

On boats with an enclosed accommodation compartment, an audible alarm shall be installed indicating that the bilge water is approaching the maximum bilge water level.

Bulkhead penetrations shall be in accordance with the requirements of ABYC H-2, Ventilation of Boats Using Gasoline, to minimize the potential for migration of carbon monoxide from machinery compartments containing gasoline engines to adjacent accommodation compartments.

Potential electrical sources of ignition located in spaces containing gasoline powered machinery, or gasoline fuel tank(s), or joint fitting(s), or other connection(s) between components of a gasoline system, shall be ignition protected, unless the component is isolated from a gasoline fuel source as described in ABYC E-11.5.3.3.

Exception:

1. Boats using diesel fuel as the only fuel source.
2. Outboard engines mounted externally or in compartments open to the atmosphere in accordance with the requirements of ABYC H-2, Ventilation of Boats Using Gasoline.

The bilge pump inlet shall be located so that excess bilge water can be removed from the bilge at static floating position, and at maximum conditions created by the boat's motion, heel, and trim.

Electrical

Disconnect power before installing or servicing the pump.

Our pump is equipped with silicone blocked, tin coated 16 gauge (1.5 mm²) wire. Please follow the table below when extending the wires.

Recommended Wire Size

Total Wire Length (positive to pump to ground) – feet (meters)

0 – 6 ft (0 – 1.8 m)	6 – 10 ft (1.8 – 3 m)	10 – 15 ft (3 – 4.6 m)	15 – 30 ft (4.6 – 5.5 m)	30 – 40 ft (5.5 – 12.2 m)
16 AWG (1.5 mm ²)	16 AWG (1.5 mm ²)	16 AWG (1.5 mm ²)	14 AWG (2.5 mm ²)	14 AWG (2.5 mm ²)

The electrical wiring, connections, and installation shall be in accordance with the requirements of ISO 10133, ABYC E-11, AC and DC Electrical Systems On Boats.

This pump must be fused as follows:

GPH (LPH)	Amps (Volts)	Amps (Volts)	Fuse Size
12 Volts			
500 (1893)	1.8 (12)	2.4 (13.6)	4 A
800 (3028)	3.0 (12)	3.7 (13.6)	5 A
1100 (4164)	3.8 (12)	4.8 (13.6)	7.5 A
24 Volts			
500 (1893)	0.8 (24)	1.0 (27)	2 A
800 (3028)	1.5 (24)	2.0 (27)	4 A
1100 (4164)	2.0 (24)	2.3 (27)	4 A

All potential sources of ignition located in spaces containing gasoline powered machinery or gasoline fuel tank(s), or joint fitting(s), or other connection(s), between components of a gasoline system, shall be ignition protected in accordance with the requirements of ISO 10133, ABYC E-11, AC and DC Electrical Systems On Boats.

The electrical wiring, connections, and installation shall be in accordance with the requirements of ISO 10133, ABYC E-11, AC and DC Electrical Systems On Boats.

Rule-Mate Intelligence

Rule-Mate bilge pumps have built-in programming that can sense when the pump is running but not pumping water to protect the pump, vessel, and the vessel's batteries. If debris fouls the sensor or the pump becomes air-bound, the pump will stop running and begin to "check" for water every 2.5 minutes. Once the debris is removed, the pump will revert to its normal operation, turning on when the water reaches approximately 2.5" (63.5 mm) and shutting off at 5/8" (16 mm).

Our Rule-Mate bilge pumps contain a fail-safe back-up program that measures the amount of work the motor is performing and the length of time the motor is running. If debris, such as a wet paper towel or leaves, became lodged against the pump, it could "trick" the pump into thinking water remained in the bilge which could deplete the vessel's battery.

If the circuit board senses the motor is running but doing little work (not pumping water) for longer than fifteen seconds, the pump will enter into a cycling mode in the same fashion as the computerized pumps. The pump will sense water every 2.5 minutes and if it senses water, it will continue to run until the water has been removed from the bilge.

After the debris is removed, the pump will automatically revert to the level sensing mode.



CAUTION: Disconnect power from the system before working on the unit to avoid personal injury, damage to the surrounding environment and/or damage to the unit.




CAUTION: Always install proper fuse size to prevent damage to product should a short occur. Failure to install proper fuse could increase risk of pump malfunction, potentially resulting in personal injury and/or fire hazard.




CAUTION: Keep all wire connections above the highest water level. Wires must be joined with butt connectors and a marine grade sealant to prevent wire corrosion.

Automatic Pump Wiring – 3 Wires


3 Position Panel Switch

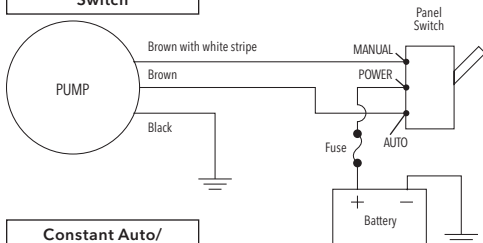

Constant Auto/ Manual Override

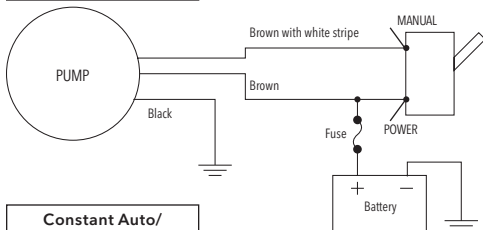

Constant Auto/ No Manual Override

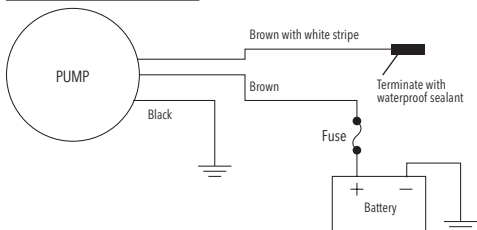

On 12 volt pump: Minimum voltage of 10.5 volts required.

On 24 volt pump: Minimum voltage of 21 volts required.

Plumbing

This bilge pump has been designed to be used with flexible hose. Rigid piping or tubing may damage the pump or the pump's discharge.

Factors that reduce the flow of a bilge pump may include but are not limited to the following:

- The length of discharge piping (longer runs reduce flow)
- The number or radius of bends
- The roughness of the interior surfaces of piping and fittings (smooth bore hose is best)
- The reduction (hose restriction) in cross-sectional area of discharge system components such as check valves and thru-hulls

Attach the discharge hose to the hose barb using stainless steel hose clamps.


The thru-hull discharge fitting should be mounted at least 8" (20.3 cm) above the heeled water line to prevent water siphoning in from outside the vessel or the discharge may be located below the maximum heeled waterline if the discharge line is provided with both of the following:

- A seacock installed in accordance with the requirements of ABYC H-27, Seacocks, Thru-Hull Connections, and Drain Plugs, and
- A vented loop or other means to prevent siphoning into the boat. A check valve shall not be used for this purpose

If the discharges of several pumps are manifolded to discharge through a single thru-hull fitting, the system shall be designed so that the operation of one pump will not back feed another pump, and the simultaneous operation of each pump will not diminish the pumping capacity of the system. A check valve shall not be used in the discharge manifold system.


A check valve may be used only when necessary to prevent an automatic bilge pump from cycling on and off due to back flow from the discharge line.

Hose connections shall be secured with a non-corrosive type of clamp, or be mechanically fastened with permanently-attached end fittings, such as swaged sleeve. Threaded inserts shall be attached with corrosion resistant metallic clamps.

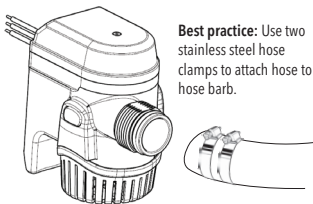

Best practice: Use two stainless steel hose clamps to attach hose to hose barb.

During the winterization of a vessel, it's recommended that you remove the check valve (if equipped) and drain any residual water from the plumbing.

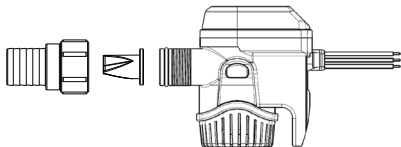

Periodically remove, clean and inspect bilge pump, check valve and its surroundings for damage or debris that may reduce the performance of the pump.

Installation

Push tabs on either side of the pump to remove pump from the base.

We recommend using #8 stainless steel flathead screws of an adequate length as to secure the pump but not penetrate the entire thickness of the hull. Use a flexible sealant in the screw holes to prevent water from penetrating the screw holes.


Insert the pump into the base and push down until an audible "click" is heard.

Flow – GPH (LPH)

GPH Series	@ 0 ft 0m - 0 kPa	@ 3.3 ft 1m - 10 kPa	@ 6.7 ft 2m - 20 kPa	Max Head Height
500	536 (2029)	289 (1094)	115 (435)	9' (2.7m)
800	942 (3566)	644 (2438)	416 (1575)	12' (3.7m)
1100	1128 (4270)	792 (2998)	456 (1726)	10' (3m)

DIMENSIONAL DRAWING

Inches (Millimetres)

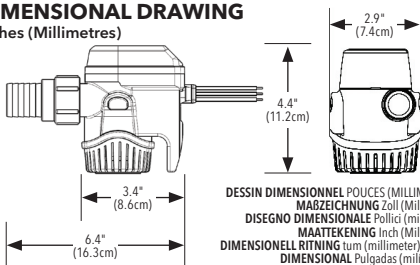


Testing the Pump

Pumpcheck

- FR Pour tester la pompe
- DE Prüfen der Pumpe
- IT Prova della pompa
- NL Testen van de pomp
- SE Testa pumpen
- ES Prueba de la bomba



HOLD FOR
5 SECONDS

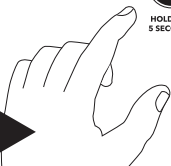

**Press & Hold for five seconds
to ensure proper operation**

- FR Appuyer et tenir enfoncé pendant 5 secondes pour confirmer le bon fonctionnement de la pompe.
- DE Fünf Sekunden gedrückt halten, um ordnungsgemäßen Betrieb sicherzustellen.
- IT Tenere premuto per 5 secondi per accertare il corretto funzionamento.
- NL Indrukken en 5 seconden ingedrukt houden om het goed functioneren van de pomp te bevestigen.
- SE Håll nedtryckt fem sekunder för att försäkra korrekt drift.
- ES Pulse y retenga el botón cinco segundos para asegurarse de que el funcionamiento sea correcto.



All mounting holes must be sealed with a marine grade sealant to prevent water intrusion.

ABYC
Setting Standards for Safer Boating

Install to ABYC
H-22 and E-11

AIS (Aquatic Invasive Species) Decontamination Process.

All of our pumps are designed to meet the ABYC standards for the current AIS Decontamination procedure including low pressure water at 120°F for 130 seconds.

Please follow current guidelines for the decontamination process.

WARRANTY

XYLEM LIMITED WARRANTY WARRANTS THIS PRODUCT TO BE FREE OF DEFECTS AND WORKMANSHIP FOR A PERIOD OF 3 YEARS FROM DATE OF MANUFACTURE. THE WARRANTY IS EXCLUSIVE AND IN LIEU OF ANY AND ALL OTHER EXPRESS OR IMPLIED WARRANTIES, GUARANTEES, CONDITIONS OR TERMS OF WHATEVER NATURE RELATING TO THE GOODS PROVIDED HEREUNDER, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY EXPRESSLY DISCLAIMED AND EXCLUDED. EXCEPT AS OTHERWISE PROVIDED BY LAW, BUYER'S EXCLUSIVE REMEDY AND SELLER'S AGGREGATE LIABILITY FOR BREACH OF ANY OF THE FOREGOING WARRANTIES ARE LIMITED TO REPAIRING OR REPLACING THE PRODUCT AND SHALL IN ALL CASES BE LIMITED TO THE AMOUNT PAID BY THE BUYER HEREUNDER. IN NO EVENT IS SELLER LIABLE FOR ANY OTHER FORM OF DAMAGES, WHETHER DIRECT, INDIRECT, LIQUIDATED, INCIDENTAL, CONSEQUENTIAL, PUNITIVE, EXEMPLARY OR SPECIAL DAMAGES, INCLUDING BUT NOT LIMITED TO LOSS OF PROFIT, LOSS OF ANTICIPATED SAVINGS OR REVENUE, LOSS OF INCOME, LOSS OF BUSINESS, LOSS OF PRODUCTION, LOSS OF OPPORTUNITY OR LOSS OF REPUTATION. THIS WARRANTY IS ONLY A REPRESENTATION OF THE COMPLETE LIMITED WARRANTY. FOR A DETAILED EXPLANATION, PLEASE VISIT US AT www.xylem.com/en-us/support/, CALL OUR OFFICE NUMBER LISTED, OR WRITE A LETTER TO YOUR REGIONAL OFFICE.

RETURN PROCEDURE

Warranty returns are conducted through the place of purchase. Please contact the appropriate entity with a receipt of purchase to verify date.