


## HEAD INSTRUCTIONS—LECTRA/SAN

1. Open water inlet valve.

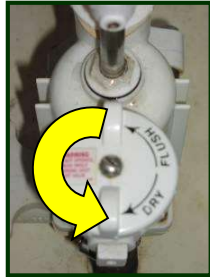

2. Pump 3 times (up & down) to put some water in the bowl.



3. Measure 1 oz. of salt and pour it in the bowl. The salt is in the cabinet above the head.



4. Do your business...

★ Nothing but waste and TP in the bowl!

Read all the following treatment instructions before doing anything!

5. Press the ■. The top light turns on with a steady green. You will hear some noise. Now, you now have 20 seconds to complete the following:




6. Pump all your business away plus 5 more strokes.



If the treatment noise changes, press R and go to step 5.

7. Close the inlet water valve. Pump until the water is gone from the bowl.

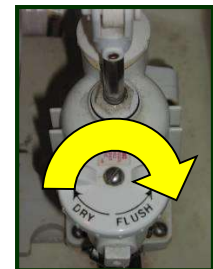

8. Close the lid!

The treatment takes 2½ minutes to finish. The noise you hear is normal.

**Alert the captain if any light except the top one starts blinking.**

### ANY QUESTIONS? ASK BEFORE GOING!